

Installation and Operation Manual

ITS pump kit 2C



its

International
Technology
Sourcing

solar division

OVERVIEW

Pump kit 2C is a simplistic pump kit for ITS evacuated and flat plate collectors. It runs off a solar electric panel and provides temperature differential pumping and tank over temperature protection. ITS's patented 1Sense technology enables differential temperature control using only a collector temperature sensor. This drastically simplifies the installation and reduces the installation time significantly.

Where to use: This kit is ideal for clients looking for a cost effective installation. It features easy installation, high performance, trouble free operation and immunity to power outages. Due to the fact that it runs directly from solar electricity it cannot provide freeze protection and should not be used with flat plate collectors in frost areas.

This kit consists of:

1. ITS-12Vdc pump with integrated 1Sense controller
2. 15mm spring type non-return (check) valve
3. 10W PV solar electric panel

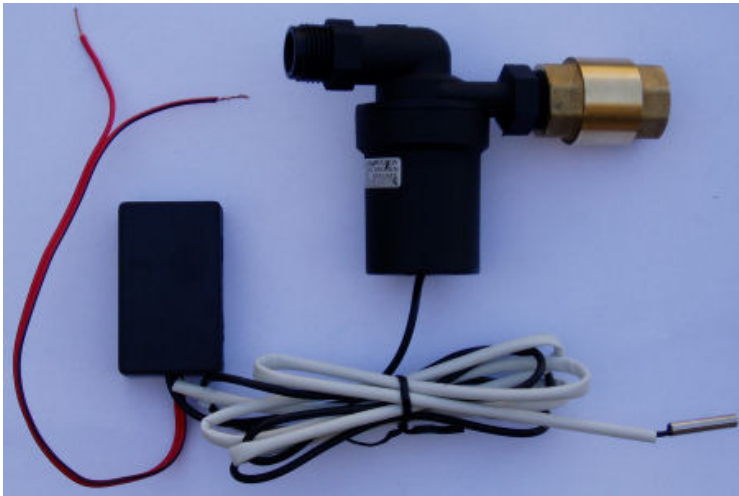


Fig 1. Pump with non return valve connected and 1Sense controller



Fig 2. 10W PV panel

its

International
Technology
Sourcing

solar division

pump pulses with about 10 seconds pause in between the pulses to inform the installer that the temperature being sensed is in the fifties. Thereafter the controller will wait for 1 min and then turn on the circulation pump for 3 minutes if the solar collector temperature is more than 50 deg C – this is part of the controller’s way of determining the geyser temperature. ITS 1Sense Technology mathematically determines the geyser temperature. Now the startup sequence is complete.

The 1Sense controller does not control the geyser element. The geyser element is controlled by the thermostat supplied with the geyser. ITS Solar recommends that the geyser thermostat temperature be set to the minimum required hot water temperature (usually 50°C) in order to minimize the use of electricity. ITS recommends the use of a geyser element timer.

FAULTFINDING

Should a fault be suspected with the controller the following steps can be taken:

1. Verify the supply to the controller as well as the pump and temperature sensor connections.
2. If the pump is not running then use a voltmeter to verify the supply to the controller and also to check if there is power on the pump terminals. Also check the polarity of the supply (a basic multimeter can do all this).
3. If the pump comes on for about 3 minutes after power up but a operational fault is suspected please verify that the sensor connections are ok. The temperature sensor can also be checked by disconnecting the sensor from the controller and measuring the sensor resistance using an ohm meter. Resistance versus temperature values are given in the table below.

ITS CtrlLite 1Sense sensor resistance values:

°C	0	10	20	30	40	50	60	70	80	90	100	110	120
Ω	33620	20174	12535	8037	5301	3588	2486	1759	1270	933	697	529	407

BASIC TECHNICAL SPECS

Product name	ITS 12Vdc pump
Power	±6W
Voltage	12Vdc
Max Temp	90°C
Max Pressure	600kPa
Head	2m
Flow rate	4 – 8 L/min
Port connections	15mm male



International
Technology
Sourcing

Product name	ITS 1 Sense controller
Power	±0.1W
Voltage range	7Vdc – 20Vdc
Temperature measuring range	0 ~ 100°C
Available power from pump output	< 12W
Differential on/off temperature	8°C/4°C
Geyser maximum temperature protection	± 70°C

Product name	10W PV panel
Type	Poly crystalline
Voltage (Vmp)	16.5Vdc
Power	10 Wp
Current (Isc)	0.78A

Product name	Non return valve
Type	Spring loaded
Pressure drop	
Port connections	15mm female
Max Temp	90°C

LIABILITY WAIVER

The manufacturer cannot monitor the compliance with these instructions or the circumstances and methods used for installation, operation and utilization of this controller. Improper installation can cause damage to the solar system and personal injury. For this reason we do not take responsibility and liability for losses, damages or cost that might arise due to improper installation, operation or wrong utilization and maintenance or that occur in some connection with the aforementioned. The manufacturer preserves the right to make changes to the product, or installation and operation instructions without prior notice. As soon as it becomes evident that safe operation is no longer possible (e.g. visible damage), please immediately take the device out of operation.



its

International
Technology
Sourcing

solar division